


Extra Heavy Duty Cabinet

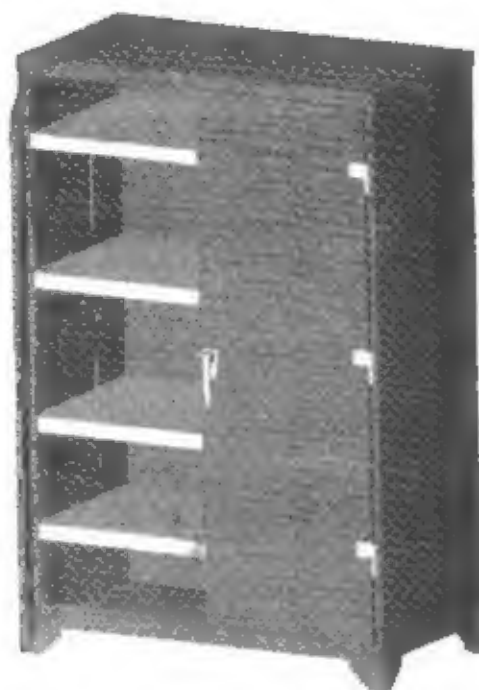

MODELS

EHD 7836	3HA62
EHD 7848	3HA63
EHD 7860	3HA64

TOOLS NEEDED:

9/16" Wrench
7/16" Wrench
3/8" Wrench

* See back of sheet
for instructions on
door handle assembly.

SAFETY INSTRUCTIONS

Cabinet should stand on a level surface. Load shelves in a balanced manner. **DO NOT OVERLOAD.**
Keep heavier items to the lower rear of the cabinet. Do not stand on shelves or use as a ladder.

PARTS LIST

Model No.	Description	Shelf Quantity	(1) Handle Part No.	(2) Door Rods Size & Part No.
EHD 7836, 3HA62	36"W X 24"D X 78"H	4	101L	33 13/16" X 1"
EHD 7848, 3HA63	48"W X 24"D X 78"H	4	101L	33 13/16" X 1"
EHD 7860, 3HA64	60"W X 24"D X 78"H	4	101L	33 13/16" X 1"



4400 S. Packers Ave. Chicago, Illinois 60609

ASSEMBLING HANDLE TO CABINET INSTRUCTIONS

TOOL NEEDED

9/16" Wrench

7/16" Wrench

3/8" Wrench

PARTS LIST

Description	Qty
Handle	1
3/8 x 1/2 - 1/4-20 Riv Nut	1
7/16 x 1/4-20 Nut	2
Plastic Spacer	1
Cam	1
Cam Cover	1
9/16 Lock Nut	1



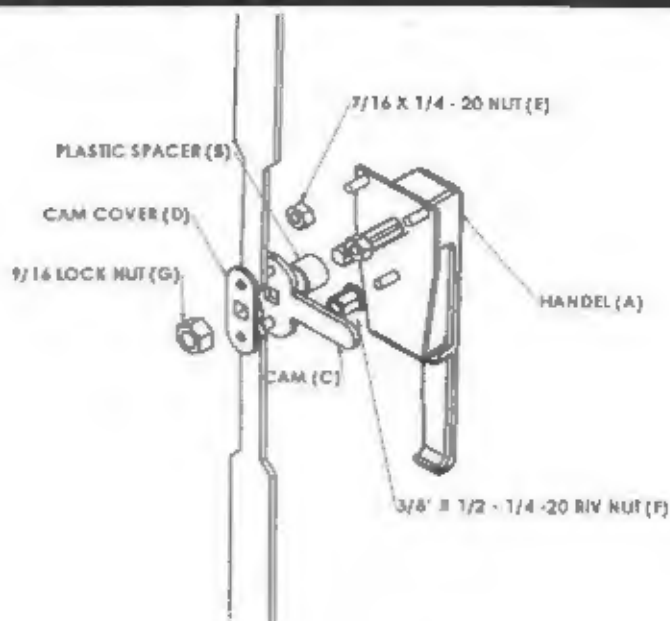


Figure 1.

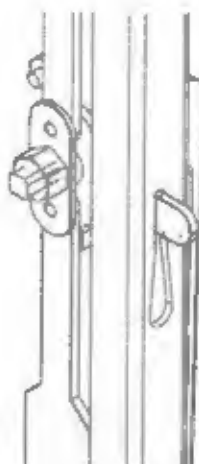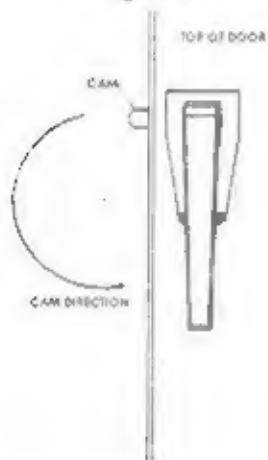

1. Insert handle in door making sure that the handle moves in the correct direction. See Figure 1.
2. Fasten the handle with (2) 7/16 x 1/4-20 Nut on the top two studs and the 3/8 x 1/2 - 1/4-20 Nut to the bottom stud.
3. Place the plastic spacer over the square shank of the Handle.
4. Rotate handle to open position and place Cam on the square shank of the handle, with Cam finger pointing toward the bottom of the door.
5. Check the direction of travel again as shown in Figure 1. With the Handle in the open position attach door rods to the studs of the Cam. Secure with the Cam Cover and 9/16 Lock Nut.